

**Siemens - Hicom - Optiset E spare parts varnished****Optiset E Standard S30817-S7004-A101**

<b>description</b>	<b>Mat.-number</b>	<b>Siemens-number</b>
case Optiset Standard, w	24030085	C39363-A184-B31-*-E
base tub Optiset Standard	24030094	C39363-A184-B231-*-E
keys grid dial German	42801128	C39363-A184-B500
keys /8er German	25216475	C39363-A184-C570
keys 4er German work	25216464	C39363-A184-C560
Plusminus keys, grey German	25216453	C39363-A184-C540
keys warmgrey	25216442	C39363-A184-B520
receiver Optiset, wg, printed, in	24020001	V38140-H-X15-3-E
Optiset Display upper part, wg	24030112	C39363-A184-C401-*-E
Optiset Display lower part, w	24030115	C39363-A184-C421-*-E

**Optiset E Advance Plus S30817-S7006-A101**

<b>description</b>	<b>Mat.-number</b>	<b>Siemens-number</b>
case Optiset Adv/Adv+	24030091	C39363-A184-B51-*-E
base tub Adv./Adv.+ anthrazit	24030076	C39363-A184-B241-*-E
keys grid dial German	42801128	C39363-A184-B500
keys /8er German	25216475	C39363-A184-C570
keys 4er German work	25216464	C39363-A184-C560
Plusminus keys, grey German	25216453	C39363-A184-C540
keys warmgrey	25216442	C39363-A184-B520
receiver Optiset, wg, printed, in	24020001	V38140-H-X15-3-E
Optiset Display upper part, wg	24030112	C39363-A184-C401-*-E
Optiset Display lower part, wg	24030115	C39363-A184-C421-*-E

**Optiset E Memory S30817-S7008-A101**

<b>description</b>	<b>Mat.-number</b>	<b>Siemens-number</b>
case Optiset Adv/Adv+	62808729	C39363-A184-B71
base tub Adv./Adv.+ anthrazit	62813481	C39363-A184-B261
keys grid dial German	42801128	C39363-A184-B500
keys /8er German	25216475	C39363-A184-C570
keys +-	25216453	C39363-A184-C540
keys Dialog	25216442	C39363-A184-B520
Keypad	A5B00025177656	C39363-A184-B620
Keypad	A5B000251779196	C39363-A184-B625
Keypad	A5B000251779196	C39363-A184-B628
receiver Optiset, wg, printed, in	24020001	V38140-H-X15-3-E
Optiset Display upper part	28332324	C39363-A184-C410
Optiset Display lower part	28332335	C39363-A184-C430

**case parts for Optiset E Entry S30817-S7001-A101**

<b>description</b>	<b>Mat.-number</b>	<b>Siemens-number</b>
case	A5B00062817342	C39363-A184-B1
base tub	A5B00062817353	C39363-A184-B200
receiver optiset, warm grey, printed	A5B00224020001	V38140-H-X15-3

**case parts for Optiset E Basic S30817-S7003-A101**

<b>description</b>	<b>Mat.-number</b>	<b>Siemens-number</b>
case Optiset	A5B00224030022	C39363-A184-B11
base tub	A5B00224030028	C39363-A184-B210
keys grid VOLUME	A5B00224000108	C39363-A184-C540

**receiver parts**

<b>description</b>	<b>Mat.-number</b>	<b>Siemens-number</b>
HA-Schalen warmgrey	A5B00022801568	C39175-A23-B1
base tub	A5B00022805528	C39175-A23-B4
Buchse gelötet	A5B000252131428	C39175-A22-B100
Hörkapsel for Opriset	A5B00025401033	C39212-Z3-C6
Mikro M.Halter DIO	A5B00025401055	C39254-Z6-C52
Magnet	A5B00027008001	C39315-Z85-C9

**case parts for Key Module S30817-S7009-B101**

<b>description</b>	<b>Mat.-number</b>	<b>Siemens-number</b>
case Optiset	A5B00062810126	C39363-A184-B81
base tub	A5B00062810016	C39363-A184-B281
keys 8er German	A5B00025216475	C39363-A184-C570

**keys grid for Octophon**

<b>description</b>	<b>Mat.-number</b>	<b>Siemens-number</b>
keys grid (dial)	A5B00022804549	C39363-A185-B501
keys grid (8er)	A5B00022804472	C39363-A185-C571
keys grid (4er)	A5B00022804483	C39363-A185-C561
keys grid (Volume)	A5B00022804516	C39363-A185-B541
keys grid (Dialogue)	A5B00022804527	C39363-A185-B521

For all optiset phones we have divers spare parts on stock:

- plastic parts, receivers, displays, keys, cables, ...

If you are in need of any spare parts please [contact](#) us.